

Computer Color Kitchen for Textile!

AUKITCHEN-C100

Achieves high-speed and highly accurate dispensing with easy operation.



Cleaning units for pipes




By putting the pipe into a cleaning unit, AUKITCHEN-C100 can clean dispensing units and pipes easily.

Input a recipe into PCs



The PC connects with CCM and imports recipe data from CCM. It can shorten the time of inputting a recipe and prevent to make a typing mistake.

Handle small quantity

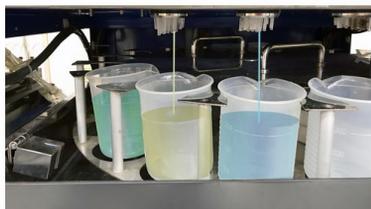

Compare to a weight type CCK, AUKITCHEN-C100 is good at dispensing small quantity (minimum quantity:0.1cc). AUKITCHEN-C100 can handle light color and effect color.

Specifications

Measurement system	Volume type	
Dispensing Range	0.1cc and over	
Number of Dyestuffs	100(1L glass jar)	
Number of Auxiliaries	5(Option)	
Size	Body	W2,000×D820×H1,250(mm)
	Weight	About400kg (without Stock dyestuff)
Power Source	AC100V±10V 50/60Hz	
Rated Power	1KW	

Various Maintenance Functions

AUKITCHEN-C100 has self-checking function, warning function and solenoid valve checking function.

Prevention of the Precipitation

AUKITCHEN-C100 prevents dyestuffs from precipitation by rotating dyestuff stocks with dispensing.

System Line up

AUCOLOR-TX10



Measuring the target colors, and making a recipe with selected dyestuffs or requested combination of dyestuffs.

AUKITCHEN mini



Weighing multiple dyestuffs simultaneously by using a dispenser. Mini volume measurement type with a turntable.

MONOPET



Making stocks of the dyestuff for a dispenser. Once you put the dyestuff, it is diluted to the desired concentration automatically.

The appearance and specifications are subject to change for improvement without notice. 2019.11.



KURABO INDUSTRIES LTD. Advanced Technology Division
14-30, Shimokida-cho, Neyagawa, Osaka, 572-0823, Japan
TEL : +81-72-812-5205 FAX : +81-72-812-5261
URL : <https://www.kurabo.co.jp/el/world/en/> E-MAIL : dm_cis@kurabo-grp.com



Access here to read more!